

ILLUMIVOR™

SHOCK-ANGLER

Contents: R/C Shock-Angler Vehicle,
Remote Control and Instructions

6+



The Illumivor remote is designed to work when pointed at Shock-Angler without visual obstruction.



BATTERY SPECIFICATIONS AND CAUTIONS

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and old batteries are not to be mixed.
- Batteries are to be inserted using correct polarity.
- Remove exhausted batteries as soon as possible and discard properly.
- Remove all batteries from compartment if toy is not used for a long period (seven months).
- The supply terminals are not to be short circuited.

HOW TO INSTALL & REPLACE BATTERIES (Adult Assistance Required)

Ask an adult to help install batteries. Use a Phillips screwdriver to open the battery covers and install fresh new alkaline batteries as shown (not included). Replace the battery covers and screw them securely closed.



BATTERIES REQUIRED

3x

LR44
(AG13)
Included

2x

AAA
Not Included

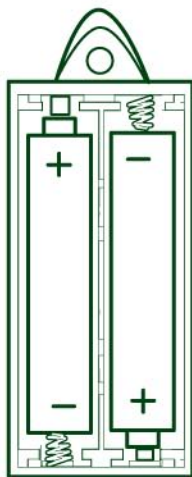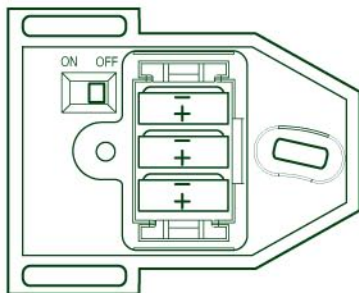

Questions or Comments?

www.illumivor.com/support

✉ support@skyrockettoys.com

☎ 1-888-674-5650

Keep these instructions for future reference.
Do not discard.

